## CONSTRUCTING FABRIC GROCERY BAGS







Stop in the library to visit the new sewing lab. Pick up materials and use the sewing machines.






## **Pattern Dimensions**

Outside Upper Cut 2 18" W x 12" L Lining Cut 2 18" W x 16.5" L

Outside Bottom Cut 1 18" W x 10.5" L Strap Cut 2 3" W X 47" L

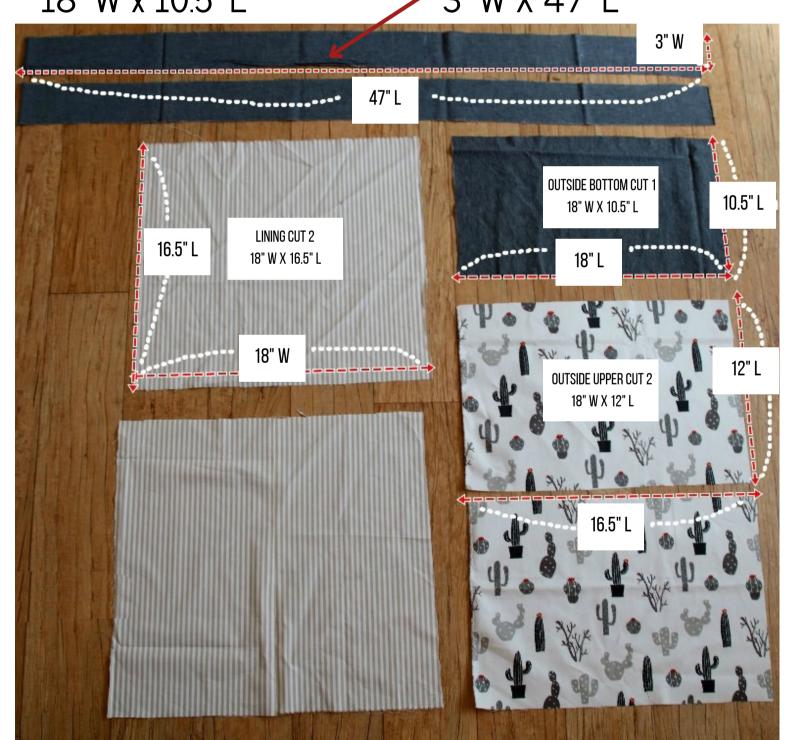
















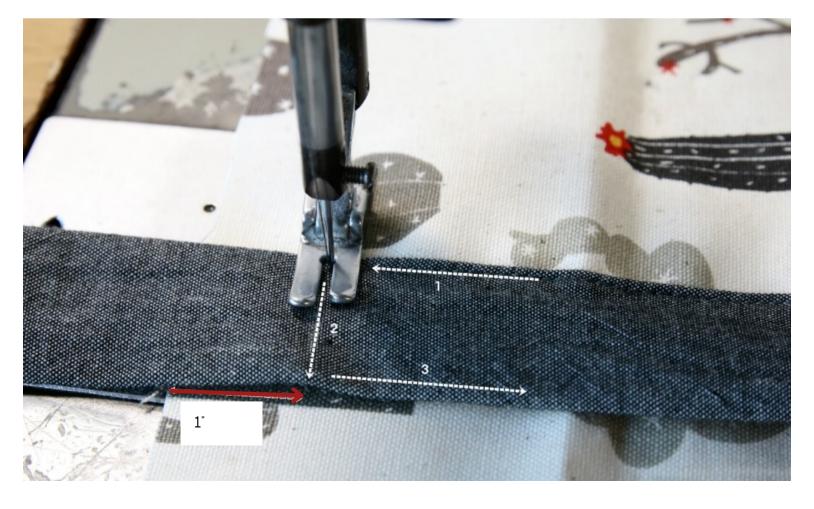





Sew both sides of upper bag to bottom fabric piece along long bottom edges. Sew with good sides facing each other. 3/8" Seam allowance. Press seams open. Option -1/4" or 1/8" topstitch offset from seam.



Fold bag in half, right sides facing each other. Sew seam 1/2" along both sides. Backstitch reinforcement at top and bottom.





Place 2 lining fabric pieces, right sides together. Sew side seams and bottom. 4" opening at bottom of lining to turn bag right side out at end.

Miter bottom corners of lining to match outer bottom fabric mitered corners.



With outer bag turned right side out, put it inside the lining. Lining right side and outer bag right side should be facing each other. Tuck straps down between lining and outer bag. Sew a seam with 3/8" seam allowance all along top edge to attach lining to bag





Pull outer bag through hole in lining to completely turn lining and bag right side out.



Tuck raw edges of lining hole inside, press and edgestitch to close. Press top edge seam open and tuck lining inside bag.



